


### METHOD TWO

Wiring needs to run up and down the studs. It will need to be stapled within 12" of a box and before it goes through the top plate to assure it stays in place.

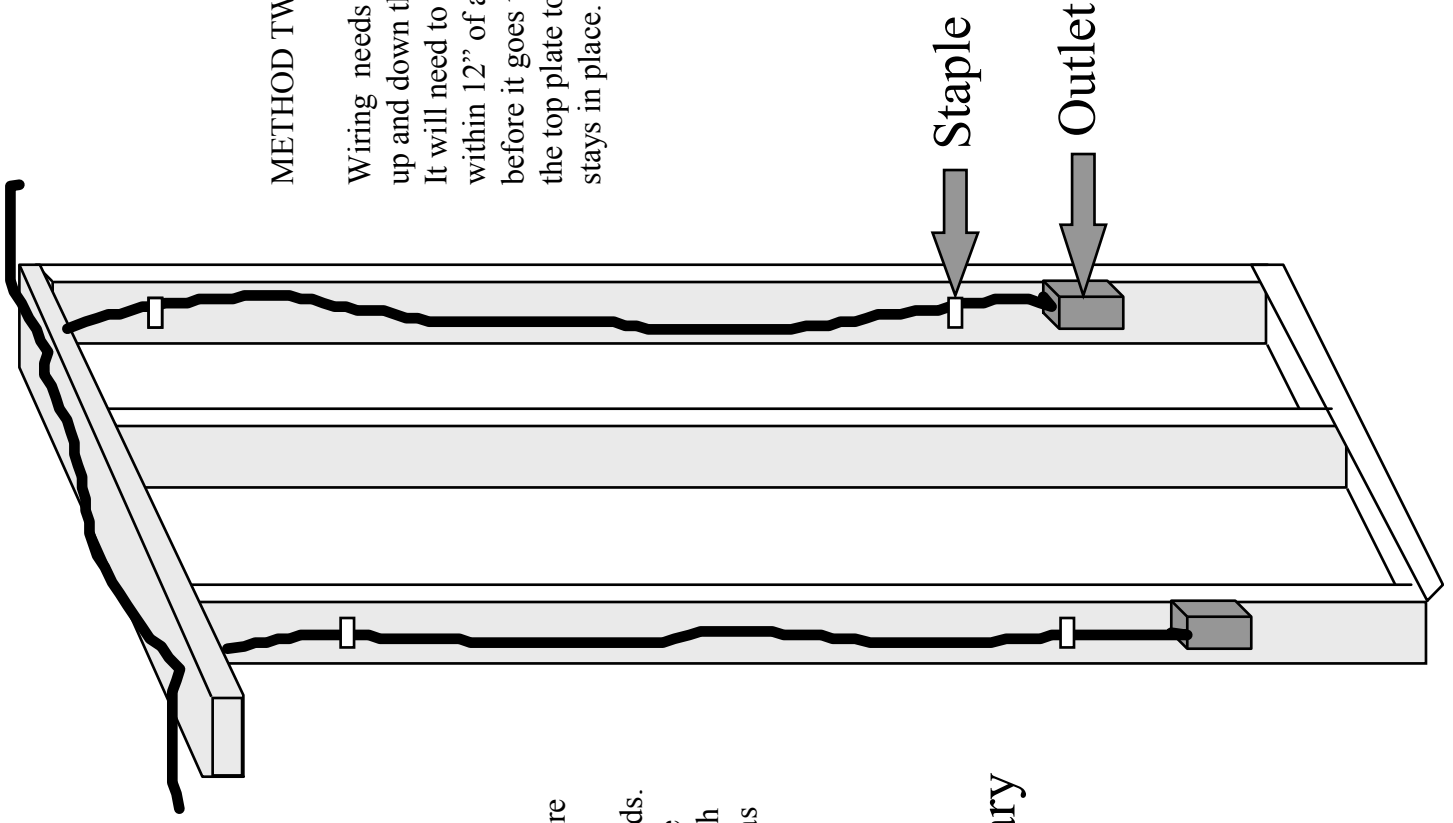

### METHOD ONE

Wiring can run directly from one box to the next similar to regular wiring methods. However the wire must be protected with blocking between the studs. The wires will need to be stapled within 12" of each box and to the blocking as shown.

